


Polycarbonate Fixing Button

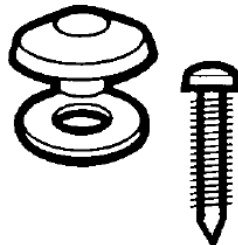

The Polycarbonate Fixing Buttons come complete with a sponge sealing washer and screw in packs of 10 and 100.

Available in the following sizes:

10mm, 16mm & 25mm

Available in the following colours:

White, Brown & Clear

Description:

Polycarbonate Fixing Buttons are used to give additional fixing strength, particularly where wind / snow loading is a consideration. The 40mm wide button is designed to secure multiwall polycarbonate glazing sheet to timber supports.

These are also used when an installer glazes a sheet of multiwall at centres greater than those recommended by the manufacturer. The wider sheet should then be fixed to intermediate rafters with the buttons to give added, necessary support.

How to use Polycarbonate fixing buttons:

- The buttons are fixed into the rafter through pre-drilled holes in the sheet.
- Holes should be drilled 2mm wider than the button shank to allow for sheet movement caused by thermal expansion and contraction. The sheet should be drilled before fitting to allow dirt, dust and swarf to be removed from the flutes.
- Insert the foam washer underneath the button head. Fit the shank of the button into the prepared hole and secure with the screw. Do not over-tighten the screw. Push the cover cap into place. You may wish to apply a small amount of silicone round the top of the screw before fixing the cap. (Please ensure that the silicone is compatible with polycarbonate.)
- Buttons should be fitted at 300mm intervals and no nearer than 100mm from any cut edge of the sheet.