


## CAPEX 50 – 70

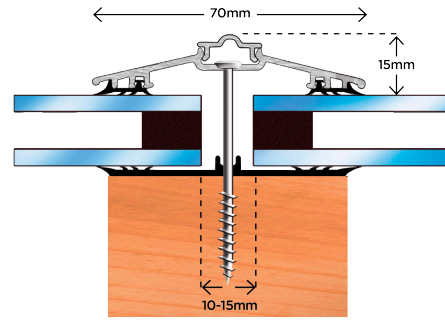

1. Remove seals from aluminium.
2. Cut aluminium to required length with a hacksaw.
3. Cut rubber seals to same length as aluminium and reinsert in grooves.
4. Position the capping profile on the glazing material.
5. If fixing to hardwood drill pilot holes then screw into place.
6. Fix endcap in position and clip screw cover in place.