


### Step 1:

- The drop seal should be fitted to the closing face (door stop face as per diagram) and is surface mounted. No preparation to the door leaf is necessary other than drilling pilot holes to receive seal fixings.

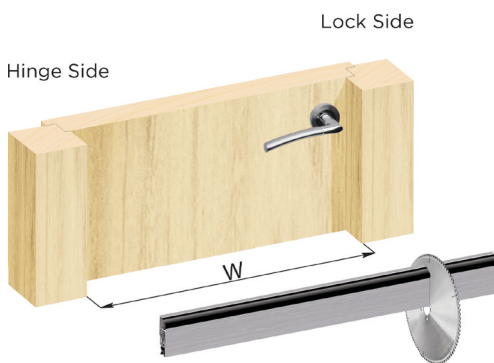


### Step 2:

- Measure total door width (W).
- Deduct 4mm from the door width ( $W - 4\text{mm}$ ).
- Cut Concealex profile to length ( $W - 4\text{mm}$ ), **ensuring the cut is from the lock side of the door. (Not Hinge Side)**


Note: If door is less than 750mm wide, trim equal amounts from each end to avoid mechanism damage. 450mm is the minimum operable size.

(a)

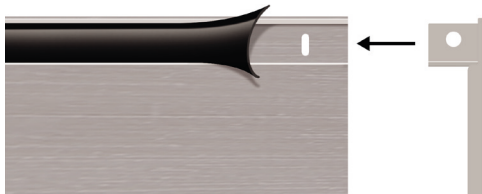


### Step 3:

- Remove black screw cover and slide endcaps into position (a).
- Align the Concealex with the bottom of the door as per diagram (b) and screw in place.
- Click screw cover in place.
- Screw the large adjusting screw into the end of the seal at the hinge side (c).

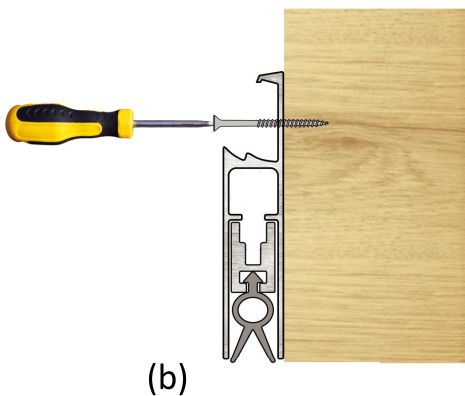

(b)

(c)

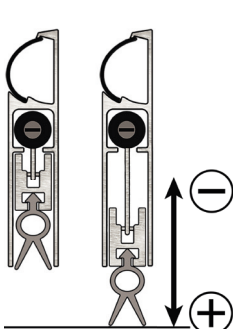

### Step 4:

- Using a screw driver make adjustments to suit under door gap.

