



CWF 50

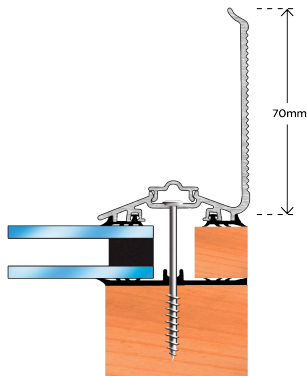

CWF 70

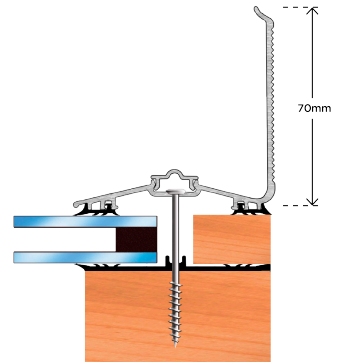

## CWF 50/70

### FITTING INSTRUCTIONS

1. Cut aluminium profile and rubber seals to required length.
2. Position the capping profile on the glazing material.
3. If fixing to hardwood drill pilot holes then screw into place.
4. Fix endcap in position.