


## Fitting Instructions

1. Close the door to which the ERD Deflector is to be fitted and measure the distance between the door frame on the outside (see illustration)

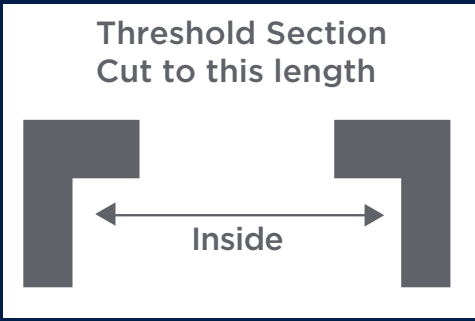

2. Using a fine toothed hacksaw, cut the aluminium 15mm shorter to allow for protective end-caps.
3. Carefully install end-caps on to the deflector. This must be done before the deflector is fitted to the door.
4. Now screw the deflector into position, leaving adequate clearance for smooth operation of the door. Ensure fixing screws are insered within 25mm(1") of the end of the deflector.

(Drill extra holes if necessary)

**exitex**<sup>TM</sup>

Exitex Ltd  
Dundalk  
Ireland  
T: (+353 42) 9371244  
Email: [info@exitex.com](mailto:info@exitex.com)

[www.exitex.com](http://www.exitex.com)