



## Finger Guard Front Section

### 1. Draw first guideline

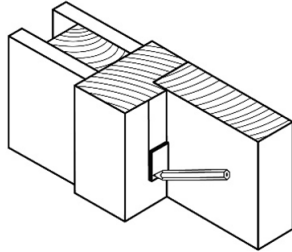


With the door in the closed position use a pencil / pen to draw a guideline on the door frame using the plastic measuring block (provided) in the vertical position (20mm)

### 2. Draw second guideline

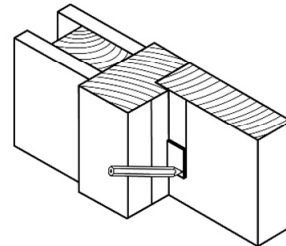


Simply repeat the procedure on the door to produce a second guideline.

### 3. Wedge the door open

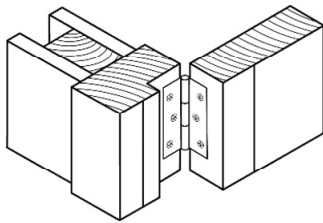


Now wedge the door in the fully open position.

### 4. Remove tape

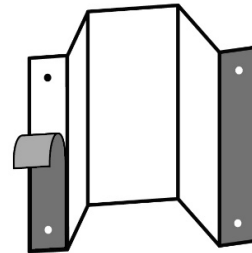


Remove one layer only of the double sided tape from each side of the finger guard device.

### 5. Attach device to door frame

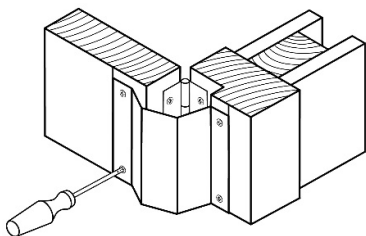

Line up the edge of the finger guard parallel to the guideline on the frame. Press firmly to hold in position before finally securing with the screws provided. For metal doors and kick plates pre drill with a 2.5mm drill bit.

### 6. Attach device to door

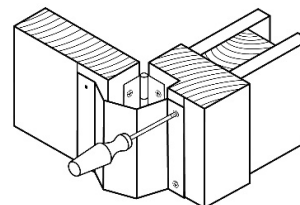

Repeat this procedure to attach the finger guard to the door itself.