



Fitting Instructions

1. Remove bristle and rubber seals from aluminium sill section. Check width between inside faces of the doorframe rebate and cut aluminium section to this size (see illustration).

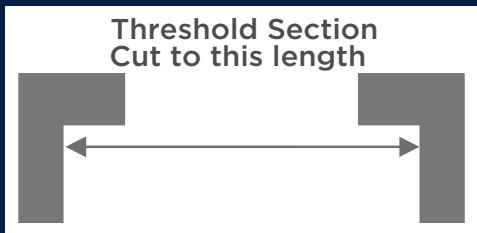

2. Cut the seals with scissors to the length of the aluminium and re-insert them into the grooves in the sill.
3. The sill requires an underdoor clearance of 24mm. If necessary, remove door and trim to allow for this, ensuring bottom of the door is smooth to avoid damage to rubber seal.
4. Position the assembled sill between the doorframe and mark fixing points through countersunk holes. Remove sill, drill fixing holes and insert plugs.
5. Apply sealing compound (Exitex Elast-O-Sealant) to underside groove at front of sill. Ensure rubber seal at rear is in place and screw into place.

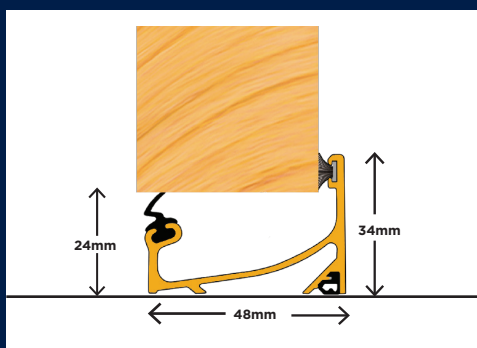

ExitexTM

SEALED IN QUALITY

Exitex Ltd
Dundalk
Ireland
T: (+353 42) 9371244
Email: info@exitex.com

www.exitex.com