



Fitting Instructions


1. Remove rubber seal from aluminium sill section. Measure width between faces of the doorframe rebate and cut aluminium section to this size (see illustration).

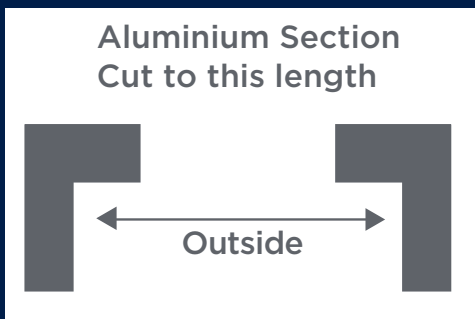

2. Cut the rubber seal to the same length as the aluminium.
3. Notch both ends of sill to allow it to fit into doorframe rebate. When the door is in the closed position the seal should be compressed by approximately 3mm. Notch sill to allow for this (see illustration).

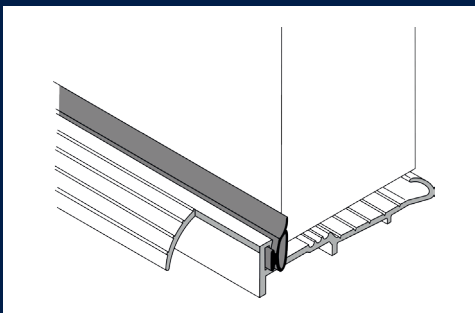

4. This sill requires an underdoor clearance of 12mm. If necessary, remove the door and trim to suit.

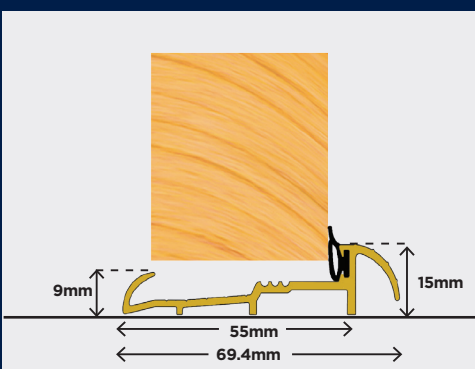

5. Position the assembled sill between the doorframe and mark fixing points through countersunk holes. Remove sill, drill fixing holes and insert plugs.
6. Apply sealing compound (Exitex Elast-O-Sealant) to underside groove at front of sill and screw sill into place.

Exitex™

SEALED IN QUALITY

Exitex Ltd
Dundalk
Ireland
T: (+353 42) 9371244
Email: info@exitex.com

www.exitex.com