



Fitting Instructions

Threshold Section

1. Check width between inside faces of the doorframe rebate and cut aluminium section to this size (see illustration).

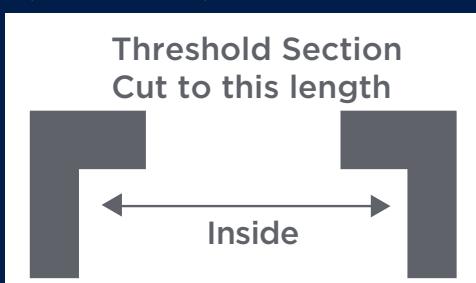

2. The clip-on-ramp is cut to the length across the internal rebate, it can be clipped into place prior to the installation of the threshold unit.

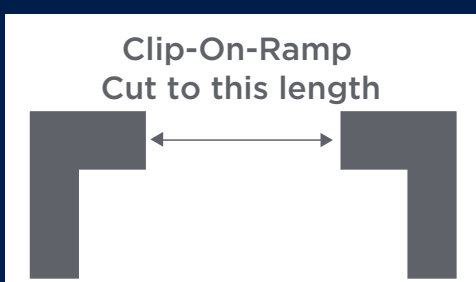

3. This sill requires an underdoor clearance of 20mm. If necessary, remove door and trim to allow for this.
4. Position the aluminium sill between the doorframe and mark fixing points through countersunk holes. Remove sill, drill fixing holes and insert plugs.
5. Apply sealing compound (Exitex Elast-O-Sealant) to underside groove at front of sill ensuring rear seal is insitu and screw into place.

Upper Section

1. Remove rubber seals from aluminium section and cut the aluminium to the door width. Notch back the exterior deflector section by 3mm at each end to allow for the deflector end caps.
2. Refit rubber seals leave them extending by 3mm on each side. Nip the groove ends of the seal carrier at the lock side to avoid them sliding out.



3. Install end caps to each side of the deflector and screw into position on the door.

Exitex™

SEALED IN QUALITY

Exitex Ltd
Dundalk
Ireland
T: (+353 42) 9371244
Email: info@exitex.com

www.exitex.com