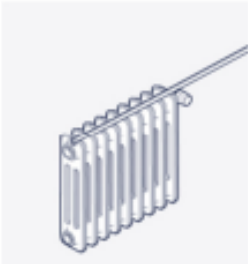


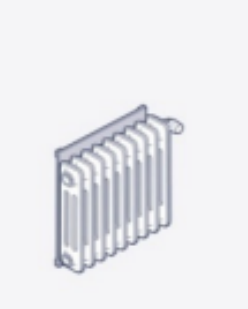




## **FITTING INSTRUCTIONS FOR RADIATOR HEAT REFLECTOR FOIL**

<p>Turn off the radiator and measure the length of the radiator.</p>	 A line drawing of a radiator with a measuring tape held against its top to indicate measurement.
<p>Using scissors or a sharp knife, cut the foil to slightly less than this size, making appropriate slits for the radiator fixing brackets. This ensures maximum wall coverage without being visible.</p>	 A line drawing showing a pair of scissors cutting a piece of material, representing the foil, into a specific shape.
<p>Apply the double sided sticky pads to the reverse of the foil top and bottom. Slide into place behind the radiator.</p>	 A line drawing of a radiator with two blue rectangular sticky pads attached to its top and bottom, representing the foil being applied.
<p>Place firmly onto the wall using broom handle or similar. Allow tab to stick fully before turning the radiator on.</p>	 A line drawing of a radiator mounted on a wall, showing the final installation.